Warranty:

LIMITED WARRANTY* ONE (1) YEAR:

Your *Elite Cuisine* small kitchen appliance is built with precision, inspected and tested before leaving our factory. It is warranted, to the original purchaser or gift recipient, to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. During that period, should the appliance fail to operate properly, return the appliance with your sales receipt to the store where purchased. This warranty gives you special legal rights and you may also have other rights to which you are entitled, which may vary from state to state. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.

This limited warranty covers appliances purchased and used within the surrounding United States and does NOT cover:

- Damages caused from improper usage or installation of appliance.
- Damages caused from shipping.
- Defects other than manufacturing defects.
- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- The loss or missing parts of the appliance. Parts will need to be purchase separately.
- Damage from service by other than an authorized dealer or service center.
- Any transportation and shipping charges.

RETURNS: Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.

*One Year Warranty valid only in the United States, **excluding** Alaska, Hawaii, and Puerto Rico. For international warranty, please contact the local distributor.
**Any instructions or policy included in this manual may subject to change at any time.

Model ETS-630B ***Elite Cuisine* Coffee & Spice Grinder**

Distributed by: ***MAXI-MATIC***® , USA
18401 E. Arenth Ave. City of Industry, CA 91748
Customer Service Department: (626) 912-9877 Ext. 116/120 MON-FRI 9am-5pm PCT
Email: info@maxi-matic.com
Or visit our website: www.maxi-matic.com

Elite
BY MAXI-MATIC®
Cuisine

Coffee & Spice Grinder

Model ETS-630B

INSTRUCTION MANUAL

Before operating your new appliance, please read all instructions carefully and keep for future reference.

IMPORTANT SAFEGUARDS ..

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs if applicable.
3. Remove all packaging plastics and other materials from unit before operating.
4. Wash all removable accessories before using for the first time.
5. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
6. Close supervision is necessary when appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to OFF position, then remove plug from wall outlet.
14. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
15. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
17. Extreme caution should be exercised when using containers constructed of other material other than metal or glass.
18. Do not store any materials other than manufacturer's recommended accessories in this unit when not in use.
19. Do not place any of the following materials in the unit: Paper, cardboard, plastic and other similar items.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

PARTS & DESCRIPTION ..

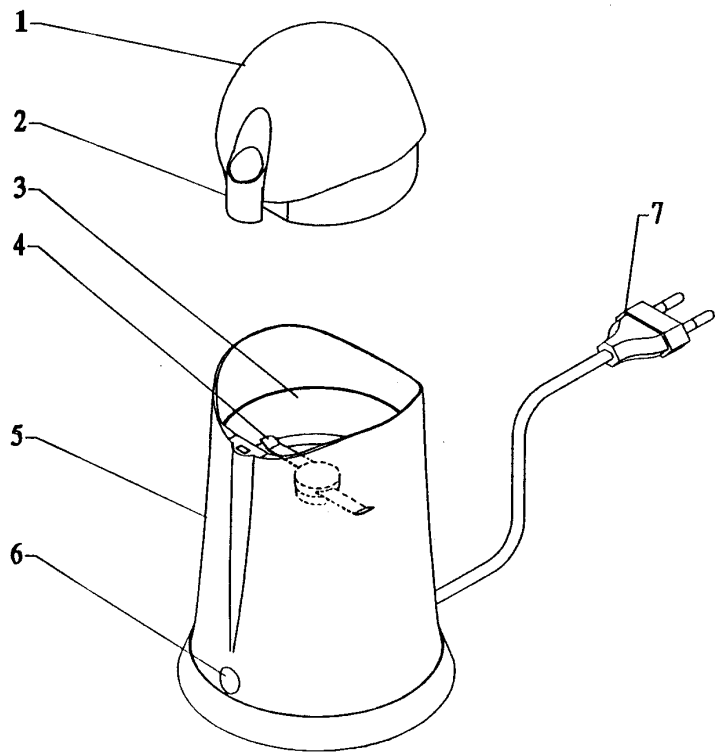

DESCRIPTION

1 – Transparent Cover
2 – Safety switch
3 – Grinding Container
4 – Stainless Steel Grinding Blade
5 – Unit Body
6 – Indicator Light
7 – Power Cord

BEFORE USING YOUR COFFEE GRINDER

- Make sure all packaging materials are removed.
- Grind only coffee, nuts or spices in this appliance.
- After you have used the appliance three times without interruption, a pause of around 60 minutes is necessary to prevent overheating the motor.
- When not in use and during cleaning, always unplug the unit.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ****Note**: When using the same appliance to grind coffee, nuts or spices, the inner container must be thoroughly cleaned or flavors might mix together. It is highly recommended to purchase multiple units if you will be frequently using the appliance for multiple uses.

Grinding Coffee Beans

- Fill with the required amount of coffee (max.36g). Put on cover with switch.
- Press switch down.
- The fineness of the ground coffee depends on the quantity of beans and the grinding time.
- To obtain ground coffee, the following quantities and times apply:
  12g: max. 20 sec.
  24g: max. 25 sec.
  36g: max. 30 sec.
- Shorter grinding times result in somewhat coarser coffee grains;
- Also observe the fineness specifications in the instructions for use of your coffee machine.
- Release the switch and wait until the fly cutter comes to a halt before removing the lid.

Grinding Nuts

- Fill the container with required amount of dry nuts (max.36g) such as peanuts, almonds, walnuts, hazelnuts, and much more.
- Put on the cover with switch.
- Press switch down.
- The fineness of the ground nuts depends on the quantity of nuts used and the grinding time.
- Shorter grinding times result in coarser ground nuts.
- Note that some nuts exude an oily substance if the nuts are over-grounded.

Grinding Spices

- Fill the container with required amount of dry spices (max.36g) such as cloves, dried chili pepper, cumin, pepper corns, coriander, nutmeg, cinnamon, and much more.
- Put on the cover with switch.
- Press switch down.
- The fineness of the ground spices depends on the quantity of spices used and the grinding time.
- Shorter grinding times result in coarser texture.

Cleaning

- Always remove the plug first.
- Clean the container and lid with a brush or dry cloth.
- The lid may also be washed in cold or tepid water.
- Wipe the casing with a damp cloth.
- Never immerse the entire unit into water.
- Do not wash the unit under running water.